

OWNER'S MANUAL

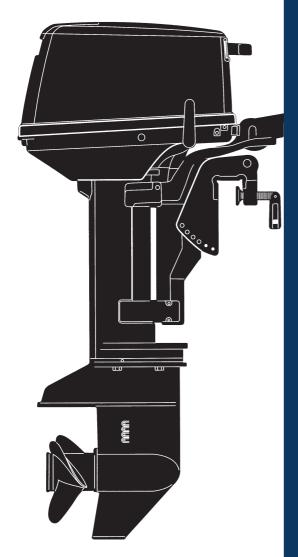



M 6B 8B 9.8B

OB No.003-11029-D

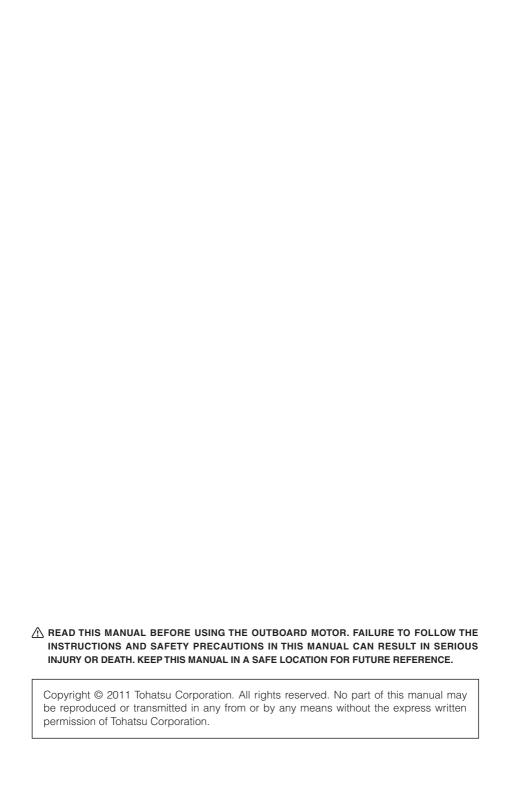

YOUR TOHATSU OUTBOARD MOTOR

OWNER REGISTRATION AND IDENTIFICATION

Upon purchasing this product, be sure that the WARRANTY CARD is correctly and completely filled out and mailed to the addressee noted there on. This WARRANTY CARD identifies you as the legal owner of the product and serves as your warranty registration.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, YOUR OUTBOARD MOTOR WILL NOT BE COVERED BY THE APPLICABLE LIMITED WARRANTY, IF THIS PROCEDURE IS NOT FOLLOWED.

PRE-DELIVERY CHECK

Be sure that the product has been checked by an authorized TOHATSU dealer before you take delivery.

Limited Warranty

Please refer to the TOHATSU outboard motor Limited warranty provided to you with this product, the terms and conditions of which, as amended from time to time, are incorporated by reference into the manual.

Serial Number

In the space below, please record the outboard motor's serial number (indicated both on the bottom cowl and on the cylinder block). The serial number will be needed in the event of theft or to quickly identifying the outboard motor type.

Serial Number:

To You. Our Customer

Thank you for selecting a TOHATSU outboard motor. You are now the proud owner of an excellent outboard motor that will service you for many years to come.

This manual should be read in its entirety and the inspection and maintenance procedures described later in this manual should be followed carefully. Should a problem arise with the outboard motor, please follow the troubleshooting procedures listed at the end of this manual. If the problem persists, contact an authorized TOHATSU service shop or dealer.

We hope you will enjoy your outboard motor and wish you good luck in your boating adventures.

TOHATSU CORPORATION

■ CONTENTS

	GENERAL SAFETY INFORMATION	. 8
1	SPECIFICATIONS	10
2	NAMES OF PARTS	11
3	INSTALLATION	14
	1. Mounting the outboard motor on boat	14
	2. Installing the remote control devices	16
	3. Installing the battery	19
4	PRE-OPERATING PREPARATIONS	21
	1. Recommended gasoline types	21
	2. Recommended engine oil	23
	3. Break-in	25
5	ENGINE OPERATION	26
	1. Starting	26
	2. Warming up the engine	30
	3. Forward and reverse	31
	4. Stopping	33
	5. Trim angle	34
	6. Tilt up, tilt down and shallow water operation	35
6	REMOVING AND CARRYING THE OUTBOARD MOTOR	38
	1. Removing the outboard motor	38
	2. Carrying the outboard motor	38
	3. Storing the outboard motor	38
	TRAILERING	
8	ADJUSTMENT	40
	1. Steering friction	40
	2. Remote control lever load	
	3. Throttle grip	
	4. Trim tab adjustment	
9	INSPECTION AND MAINTENANCE	
	1. Daily inspection	
	2. Periodic inspection	
	3. Off-season storage	
	4. Pre-season check	
	5. Motor submerged in water	
	6. Cold weather precautions	
	7. Checking after striking underwater object	
	TROUBLESHOOTING	
_	TOOL KIT AND SPARE PARTS	
	OPTIONAL ACCESSORIES	
13	PROPELLER TABLE	60

■ INDEX

GENERAL SAFETY INFORMATION	
1. SPECIFICATIONS	1
2. NAMES OF PARTS	2
3. INSTALLATION	3
4.PRE-OPERATING PREPARATIONS	4
5.ENGINE OPERATION	5
6.REMOVING AND CARRYING THE OUTBOARD MOTOR	6
7.TRAILERING	7
8.ADJUSTMENT	8
9.INSPECTION AND MAINTENANCE	9
10.TROUBLESHOOTING	10
11.TOOL KIT AND SPARE PARTS	11
12.OPTIONAL ACCESSORIES	12
13.PROPELLER TABLE	13
	1. SPECIFICATIONS 2. NAMES OF PARTS 3. INSTALLATION 4.PRE-OPERATING PREPARATIONS 5.ENGINE OPERATION 6.REMOVING AND CARRYING THE OUTBOARD MOTOR 7.TRAILERING 8.ADJUSTMENT 9.INSPECTION AND MAINTENANCE 10.TROUBLESHOOTING 11.TOOL KIT AND SPARE PARTS 12.OPTIONAL ACCESSORIES

■ GENERAL SAFETY INFORMATION

NOTICE: DANGER/WARNING/CAUTION/Note

Before installing, operating or otherwise handling your outboard motor, be sure to thoroughly read and understand this Owner's Manual and carefully follow all of the instructions. Of particular importance is information preceded by the words "DANGER," "WARNING," "CAUTION," and "Note." Always pay special attention to such information to ensure safe operation of the outboard motor at all times.

⚠ DANGER

Failure to observe will result in severe personal injury or death, and possibly property damage.

⚠ WARNING

Failure to observe could result in severe personal injury or death, or property damage.

A CAUTION

Failure to observe could result in personal injury or property damage.

O Note

This instruction provides special information to facilitate the use or maintenance of the outboard motor or to clarify important points.

EMERGENCY STOP SWITCH

The Emergency Stop Switch will stall the outboard motor when the stop switch tether is pulled off. This stop switch tether can be attached to the operator of the outboard motor to minimize or prevent injuries from the propeller in case the operator falls overboard.

We highly recommend use of the Emergency Stop Switch tether.

WARNING

Accidental activation of the Emergency Stop Switch (such as the tether being pulled out in heavy seas) could cause passengers to lose their balance and even fall overboard, or it could result in loss of power in heavy seas, strong currents, or high winds. Loss of control while mooring is another potential hazard.

To minimize accidental activation of the Emergency Stop Switch, the 500 mm (20 inch.) stop switch tether is coiled and can extended to a full 1,300 mm (51 inch.).

SAFE OPERATION OF BOAT

As the operator/driver of the boat, you are responsible for the safety of those aboard and those in other boat around yours, and for following local boating regulations. You should be thoroughly knowledgeable on how to correctly operate the boat, outboard motor, and accessories. To learn about the correct operation and maintenance of the outboard motor, please read through this manual carefully.

It is very difficult for a person standing or floating in the water to take evasive action should he or she see a power boat heading in his /her direction, even at a slow speed. Therefore, when your boat is in the immediate vicinity of people in the water, the outboard motor should be shifted to neutral and shut off.

WARNING

SERIOUS INJURY IS LIKELY IF A PERSON IN THE WATER MAKES CONTACT WITH A MOVING BOAT, GEAR HOUSING, PROPELLER, OR ANY SOLID DEVICE RIGIDLY ATTACHED TO A BOAT OR GEAR HOUSING.

SERVICING, REPLACEMENT PARTS & LUBRICANTS

We recommend that only an authorized service shop perform service or maintenance on this outboard motor. Be sure to use genuine parts, genuine lubricants, or recommended lubricants.

MAINTENANCE

As the owner of this outboard motor, you should be acquainted with correct maintenance procedures. It is the operator's responsibility to perform all safety checks and to ensure that all lubrication and maintenance instructions are complied with for safe operation. Please comply with all instructions concerning lubrication and maintenance. You should take the engine to an authorized dealer or service shop for periodic inspection at the prescribed intervals.

Correct periodic maintenance and proper care of this outboard motor will reduce the chance of problems and limit overall operating expenses.

MOUNTING

Outboard motor mounting must be performed by trained service person(s) using lift or hoist with sufficient capacity.

■ SPECIFICATIONS

6B MF, 8B MF, 8B EF, 8B EP, 9.8B MF, 9.8B EF, 9.8B EP


	MODEL	6B MF	8B MF	8B EF	8B EP	9.8B MF	9.8B EF	9.8B EP
Item								
	Overall Length mm (in)		793 (31.2)		505 (19.9)	793 (31.2)		505 (19.9)
Overall W	idth mm (in)		320 (12.6)		275 (10.8)	320 (12.6) 275 (10.8)		
Overall	S mm (in)				996 (39.2)			
Height	L mm (in)				1,123 (44.2)			
	UL mm (in))	1,250 (49.2)						
T	S mm (in)				435 (17.2)			
Transom Height	L mm (in)				562 (22.2)			
Ü	UL mm (in))				689 (27.1)			
	S kg (lb)	26	(57)	29 (64)	28.5 (63)	26 (57)	29 (64)	28.5 (63)
Weight	L kg (lb)	27	(60)	30 (66)	29.5 (65)	27 (60)	30 (66)	29.5 (65)
	UL kg (lb)	28	(62)	31 (68)	30.5 (67)	28 (62)	31 (68)	30.5 (67)
Output	kW (Hp)	4.4 (6) 5.9 (8)		7.2 (9.8)				
Max. Ope	rating Range rpm	4,500 – 5,500				5,000 - 6,000		
Idle	Forward Gear rpm	750						
Speed	Neutral Gear rpm	950						
Number o	Number of Cylinder		2					
Piston Dis	Piston Displacement mL (Cu in)		169 (10.3)					
Bore x Str	roke mm (in)	50 x 43 (1.97 x 1.69)						
Exhaust S	System	Through hub exhaust						
Lubricatio	n System	Engine Oil Mixed Gasoline						
Cooling S	ystem	Forced water cooling						
Starting S	System	Mai	nual	Electric sta	rter motor*	Manual	Electric sta	rter motor*
Ignition System		Flywheel Magneto C.D. Ignition						
Spark Plug		BP7HS-10 or BPR7HS-10						
Trim Position		6						
Fuel Mixin	ng Ratio	Unleaded Gasoline 50 : Genuine 2-stroke Engine Oil 1						
Gear Oil		Genuine Gear Oil or API GL5, SAE #80 to #90, approx. 320mL						
Fuel Tank	Capacity L (US gal)	12 (3.17)						
Gear Red	uction Ratio			2	2.08 (13 : 27	")		

^{*:} with manual

Remark: Specifications subject to change without notice.

NAMES OF PARTS

6B MF, 8B MF, 9.8B MF

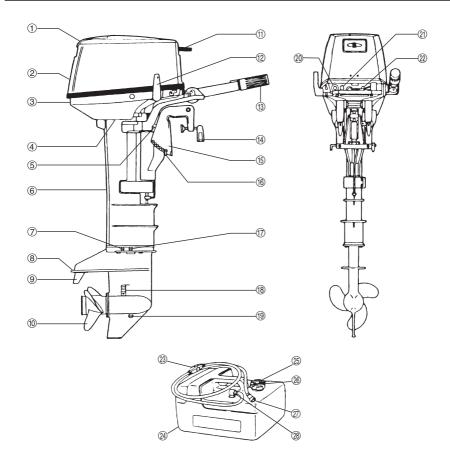


- ① Tilt Handle
- 2 Top Cowl
- 3 Bottom Cowl
- Cooling Water Check Port
- (5) Tilt Stopper
- 6 Drive Shaft Housing
- Water Plug
- Anti Ventilation Plate
- Anode / Trim Tab
- Propeller

- 11) Starter Handle
- (2) Shift Lever
- 13 Throttle Grip
- (4) Clamp Screw
- (5) Clamp Bracket
- **16** Thrust Rod
- ① Oil Plug (Upper)
- ® Water Inlet
- (9) Oil Plug (Lower)
- @ Stop Switch

- ② Choke Knob
- 2 Fuel Connector
- 3 Primer Bulb
- ② Fuel Tank
- 35 Fuel Tank Cap
- Air Vent Screw
- @ Fuel Connector
- **®** Fuel Pick up Elbow

8B EF, 9.8B EF

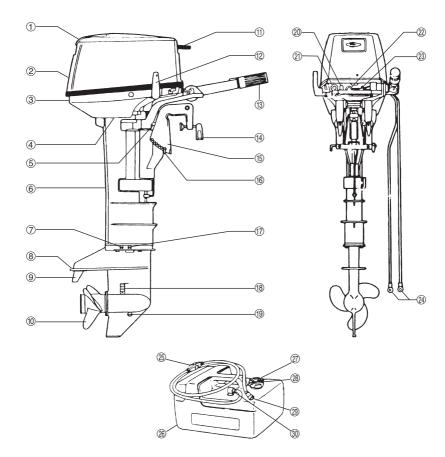



- ① Tilt Handle
- 2 Top Cowl
- 3 Bottom Cowl
- 4 Cooling Water Check Port
- ⑤ Tilt Stopper
- ® Drive Shaft Housing
- Water Plug
- Anti Ventilation Plate
- Anode / Trim Tab
- Propeller

- 11) Starter Handle
- (2) Shift Lever
- (1) Throttle Grip
- (4) Clamp Screw
- (15) Clamp Bracket
- **16** Thrust Rod
- ① Oil Plug (Upper)
- ® Water Inlet
- (9) Oil Plug (Lower)
- Choke Knob

- ② Stop Switch
- 2 Main Switch
- **3** Fuel Connector
- ② Battery Cord
- ® Primer Bulb
- **26** Fuel Tank
- 7 Fuel Tank Cap
- Air Vent Screw
- Fuel Connector
- 30 Fuel Pick up Elbow


8B EP, 9.8B EP

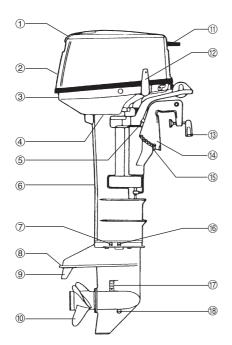




- ① Tilt Handle
- 2 Top Cowl
- 3 Bottom Cowl
- 4 Cooling Water Check Port
- ⑤ Tilt Stopper
- 6 Drive Shaft Housing
- Water Plug
- Anti Ventilation Plate
- Anode / Trim Tab
- Propeller

- 11) Starter Handle
- (2) Shift Lever
- (13) Clamp Screw
- (4) Clamp Bracket
- (15) Thrust Rod
- (6) Oil Plug (Upper)
- Water Inlet
- ® Oil Plug (Lower)
- (9) Choke Knob
- Fuel Connector

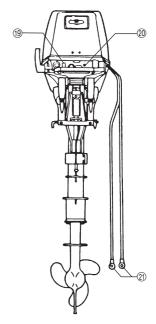



- ② Battery Cord
- 2 Primer Bulb
- 3 Fuel Tank
- (4) Fuel Tank Cap
- 25 Air Vent Screw
- **®** Fuel Connector
- Tuel Pick up Elbow
- **®** Remote Control
- ²⁹ Main Switch
- 39 Stop Switch
- 3 Cord Assembly

INSTALLATION

1. Mounting the outboard motor on boat


⚠ WARNING

Most boats are rated and certified in terms of their maximum allowable horsepower, as shown on the boat's certification plate. Do not equip your boat with an outboard motor that exceeds this limit. If in doubt, contact your dealer.

Do not operate the outboard motor until it has been securely mounted on the boat in accordance with the instructions below.


Installation

Single-engine Installation Set engine at center of boat.

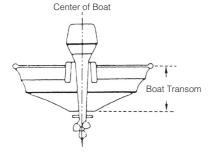

Transom matching

① Be sure that the anti ventilation plate of the outboard motor is 30-50mm (1.2-2 in) below the bottom of hull. If the above condition cannot be met due to the shape of the bottom of your boat, please consult your authorized dealer.

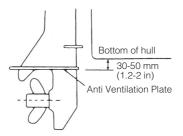

② To attach the outboard motor to the boat, tighten the clamp screws by turning their handles.

Also, use the bolts to secure the outboard motor brackets on transom board.

Secure the outboard motor with a rope to prevent loss overboard.

Note

A rope is not included in the standard accessories.



⚠ CAUTION

- Before beginning the running test, check that the boat with maximum capacity loading floats on the water in a proper attitude. Check the position of water surface on the driveshaft housing. If the water surface is near the bottom cowling, in high waves, water may enter the engine cylinders.
- Incorrect outboard motor mounting height or existence of underwater object(s), such as hull bottom design, bottom surface conditions or underwater accessories. can cause water spray possibly reaching the engine through an opening of the bottom cowling during cruising. Exposing the engine to such conditions for extended periods can lead to severe engine damage.

⚠ CAUTION

Mounting bolts should be installed with the bolt head at inside surface of the transom. Mounting bolts installed with the threaded end at the inside surface of the transom can cause personal iniurv.

) Notes

- 1. Apply sealing agent, such as silicone sealed between the bolts and the transom board holes before tightening the bolts.
- 2. Be sure to tighten the mounting bolt nuts to the specified torque. (30 Nm (3.0kgf)13ft · lb)

WARNING


- Mounting the outboard motor without following this manual can lead to unsafe conditions such as poor maneuverability, lack of control or
- Loose clamp screws and/or mounting bolts can lead to the release or displacement of the outboard motor. possibly resulting in lost of control and/ or serious personal injury. Be sure that fasteners are tightened to the specified torque (30 Nm (3.0kgf) 13ft·lb). Check the fasteners for tightness from time to
- Be sure to use outboard mounting fasteners included in the outboard motor package or their equivalents in terms of size, material, quality and strength.
 - Tighten fasteners to the specified torque (30 Nm (3.0kgf) 13ft·lb). Test cruise to check if fasteners are tightened securely.
- Outboard motor mounting must be performed by trained service person(s) using lift or hoist with sufficient capacity.

2. Installing the remote control devices


It is recommended that you consult with your authorized dealer for installation adjustment of the remote control device.

- Installation of the Remote Control Cables (Box side):
 Follow the instruction manual provided with the remote control.
- Installation of the Remote Control on your boat : Follow the instruction manual provided with the remote control.
- Installation of the Remote Control Cable (engine side) and the Cord Assembly (Wiring Harness):


- Fitting of holder cap and sleeve B guide
 - **Throttle side.....** Fit the holder cap to the end of the cable and fix it by the nut.



Shift side..... Fit the sleeve B guide to the end of the cable and fix it by the nut.



- ② Fitting of Remote Control Cable to Engine
 - **Throttle side.....** Set the throttle cable to the cable clip and then connect the holder cap to the ball joint of throttle lever.
 - **Shift side.....** Set the shift cable to the cable clip and then insert the lock pin at the shift lever fitting hole and turn it 90° to lock it.

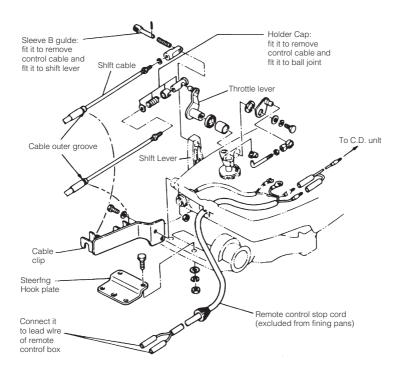

Note

Put the control lever in the Neutral position and the free accel lever in the fully closed position.

Note

Length of Remote Control Cable depends on a size of a boat.

A CAUTION


Be careful not to loop remote control cables to diameter of 406 mm (16 inches) or less.

O Note

Confirm whether the engine side shift is in gear when shifting the control lever of the remote control to its first position in Forward or Reverse (about 32°) and whether the throttle of the carburetor is fully open when shifting the lever further.

Confirm whether the carburetor's throttle is fully closed when the control lever is shifted to the Neutral position. If it is not, adjust the position of the ball holder.

③ Connecting the Cord Assembly (Wiring Harness) Pass the cord assembly from the remote control through the hole in the bottom cowl and connect the electric terminals and then clamp the cord assembly according to the drawing below.

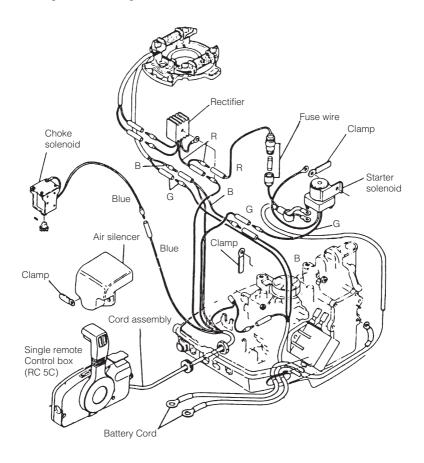

WARNING

Do not disconnect the cord assembly when the outboard motor is in operation or you will lose control of the outboard motor.

3. Installing the battery

1) Place the battery box in a convenient position away from possible water spray. Securely fasten both the box and the battery so they do not shake loose.

Note

Minimum recommended battery: 12V, 40AH (465 Marine Cranking Amps (MCA) or 350 Cold Cranking Amps (CCA)) Specifications and features of batteries vary among the manufacturers. Consult the manufacturer for details.

⚠ WARNING

Battery electrolyte contains sulfuric acid and thus is hazardous, causing a burn if it comes in contact with your skin, or poisonous if swallowed. KEEP BATTERY AND ELECTROLYTE AWAY FROM REACH OF CHILDREN When handling the battery, be sure to:

- · Read all warnings shown on the battery case
- Prevent electrolyte from coming in contact with any part of your body. Contact can cause serious burn or. if it comes in contact with your eye, loss of sight. Use safety glasses and rubber gloves.

In case battery electrolyte comes in contact with:

- Skin, flush thoroughly with water.
- Eye, flush thoroughly with water, and then seek immediate medical treatment.

In case battery electrolyte is swallowed:

Seek immediate medical treatment.

⚠ WARNING

Battery generates explosive hydrogen gas. Be sure to:

- · Charge the battery in a wellventilated place.
- Place the battery away from any source of fire, sparks and open flames such as burners or welding eauipment.
- Do not smoke when handling the
- Do not smoke near the battery when the battery is charging.


⚠ CAUTION

- Make sure that the battery cords do not get stuck between the outboard motor and boat when turning, etc.
- The starter motor may fail to operate if the cords are incorrectly connected.
- Be sure to correctly connect the (+) and (-) cords. If not, the charging system will be damaged.
- · Do not disconnect the battery cords from battery while the engine is operating, the electrical parts could be damaged.
- Always use a fully charged battery.

⚠ CAUTION

Do not use a battery that is not recommended. Use of a battery not recommended can lead to poor performance of, and/or damage to, the electrical system.

② Connect the positive lead (+) to the positive terminal (+) of the battery, and then connect the negative lead (-). When disconnecting the battery always remove the negative lead (-) first. After connecting the positive terminal (+), securely place a cap on it to prevent short circuits.

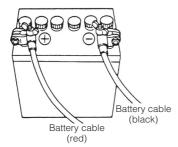

■ PRE-OPERATING PREPARATIONS

⚠ DANGER

Consult an authorized dealer for details on handling of gasoline, if necessary.

Gasoline and its vapors are very flammable and can be explosive.

When carrying a fuel tank containing gasoline:

- Close the air vent screw of fuel tank cap, or gasoline vapor will be emitted through the air vent screw, creating a fire hazard.
- Do not smoke.

When or before refueling:

- •Stop the engine, and do not start the engine during refueling.
- Do not smoke.
- •Be careful not to overfill fuel tank. Wipe up any spilled gasoline immediately.

When or before cleaning the gasoline tank:

- •Dismount fuel tank from the boat.
- Place the fuel tank away from every source of ignition, such as sparks or open flames.
- •Do the work outdoors or in well ventilated area.
- Wipe up any spilled gasoline immediately.

After cleaning gasoline tank:

- •Wipe up any spilled gasoline immediately.
- If the fuel tank is disassembled for cleaning, reassemble carefully. Imperfect assembly may cause a fuel leak, possibly leading to fire or explosion.
- Dispose of aged or contaminated gasoline in accordance with local regulations.

1. Recommended gasoline types



Use of low-quality gasoline results in a short engine life as well as starting difficulties and other engine problems. We recommend use for Fuel stabilizer.

Use of unleaded gasoline

Use a major brand of automotive unleaded gasoline with a minimum posted octane rating of 91RON. Automotive gasoline that contain fuel injector cleaner are preferred for added internal engine cleanliness. Leaded gasoline is acceptable in areas where unleaded gasoline is not available.ere unleaded gasoline is not available.

Use of alcohol free gasoline

CAUTION

Use of gasoline containing alcohol can cause engine starting and/or operating difficulties, wear of and damages to engine parts, and deterioration of chemical parts, which may lead to shortening of your outboard motor's life.

) Note

The adverse effect caused by the alcohol content is more severe with methanol than with ethanol.

TOHATSU recommend the use of gasoline if its ethanol content is less than 10% or methanol content is less than 5%, only in case alcohol free gasoline is not available.

The alcohol component of the gasoline absorbs moisture from the air, which may disturb regular fuel flow in the fuel system, and also accelerate rusting of engine parts.

Mixing of the moisture in the engine oil can also deteriorate the properties of the lubricant.

If the use of gasoline containing alcohol is inevitable, or presence of alcohol is suspected in the gasoline, it is strongly recommended to add a filter that has water separating capability, and check the fuel system for leaks and mechanical parts for corrosion and abnormal wear more frequently.

And, in case any of such abnormality is found, discontinue the use of such gasoline and contact our dealer immediately.

Damages resulting from the use of gasolines that contain alcohol are not covered under the limited warranty.

Fuel tank capacity: 12 liters (3.17 U.S. gal)

Fuel Tank: When using a fixed fuel tank in place of genuine fuel tank, it is recommended to select a one with a structure facilitating interior cleaning.

WARNING

Do not fill the fuel tank over capacity. The rise of gasoline temperature may cause gasoline to expand which, if overfilled, may leak through air vent screw when it is open. Leaking gasoline is a dangerous fire hazard.

2. Recommended engine oil

Use a genuine engine oil or recommended one. Refer to your Distributor.

Will not recommend use of other two stroke engine oil.

CAUTION

Do not mix different brands of oil. Mixing different brands of oil, or different types of oil even if the brand is the same, may cause gelling, resulting in possible filter screen blockage. This could result in serious engine damage because of impaired lubrication performance.


) Note

Use of engine oils that do not meet these requirements will result in reduced engine life, and other engine problems.

Add engine oil into fuel oil tank. The mixing ratio with gasoline is 1:50 (one part oil and 50 parts gasoline). Mix well by hand. The mixing ratio during breakin running is 1:25.

Mixing Ratio

	Engine Oil : Gasoline
During break-in	1 : 25
After break-in	1 : 50

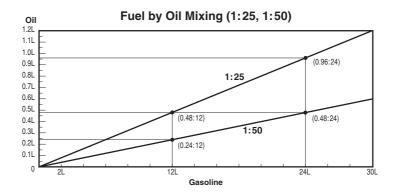

Engine oil – gasoline mixing procedure

For quantities of engine oil and gasoline to be pre-mixed, refer to table in previous page.


⚠ CAUTION

- Do not use other than two stroke engine oil with specified grade, or the engine may be damaged.
- Do not use fuel prepared in other than specified mixing ratio.
 - Lack of engine oil can cause severe engine trouble such as piston seizure.
 - Excess of engine oil can shorten spark plug life, and/or cause increase of noxious exhaust.
- When portable fuel tank is used for operation of outboard motor(s):
 - ① Pour engine oil into fuel tank, and then, gasoline.
 - ② Put cap on the tank, and close tightly.
 - ③ Close air vent plug tightly.

WARNING

Loose cap or air vent plug can cause leak of fuel during shaking the tank.

- Shake the tank to mix engine oil and gasoline well and even.
- When fuel tank built in the boat is used for operation of outboard motor(s):
 - ① Prepare separate fuel container for pre-mixing.

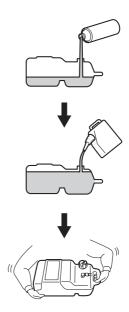

- 2 Pour engine oil into fuel container, and then, gasoline.
- ③ Put cap on the container, and close tightly.
- 4 Shake the container to mix engine oil and gasoline well and even.
- (5) Pour the mixture into fuel tank.

Notes

- It is recommended to pre-mix by using separate fuel container.
 Attempting to pre-mix in the fuel tank built-in the boat can make the mixture uneven.
- If built-in fuel tank is used for mixing, pour engine oil into the tank little by little while putting gasoline into the tank.

3. Break-in

Your new outboard motor and lower unit require break-in for the moving components according to the conditions described in the following time table.

Break-in period: 10 hours.

⚠ CAUTION

Operating the outboard motor without break-in can shorten service life of the product.

If any abnormality is experienced during the break-in:

- Discontinue the operation immediately.
- Have the dealer check the product and take proper action(s) if necessary.

	1-10min	10min-2hrs	2-3hrs	3-10hrs	After 10hrs
Throttle Position	ldle	Less than 1/2 throttle	Less than 3/4 throttle	3/4 throttle	Full throttle available
Speed		Approx. 3,000 rpm max	Full throttle run allowed for 1 min every 10 min	Approx. 4,000 rpm. Full throttle run allowed for 2 min every 10 min	

) Note

Proper break-in allows outboard motor to deliver it full performance for longer service life.

Fuel mix ratio for break-in

Gasline 25: Genuine Engine Oil 1

• 25:1 when using genuine engine oil or the recommended one (TCW3).

⚠ DANGER

Do not operate the outboard motor in closed area or area with no forced ventilation.

Exhaust gas emitted by this outboard motor contains carbon monoxide that will cause death if inhaled continuously. Inhaling the gas initially causes symptoms such as feeling of sickness, drowsiness and headache. During operation of the outboard motor:

- Keep peripheral area well ventilated.
- Always attempt to stay on the windward side of emission.

■ ENGINE OPERATION

1. Starting

WARNING

In case engine starts in gear, do not start cruising. Stop engine immediately and consult an authorized dealer.

Note

The engine will not start unless the switch lock has been properly connected into the emergency stop switch.


WARNING

Do not operate the engine with gear case out of water. Severe personal injury, or engine damage will result. ① Loosen the air vent screw on the tank cap.




② Attach the fuel connector to the engine connector.

The arrow mark on the primer bulb should be facing the engine.



③ Feed fuel to the carburetor by squeezing the primer bulb until it is firm.




MF and EF type

4) Place the shift lever in the Neutral position.

Be sure that the shift is in Neutral when starting the engine.

This model is provided with start in gear protection.



⚠ CAUTION

If the engine starts in gear, do not use it. Contact an authorized dealer.

Note

Start-in-gear protection prevents engine from starting at other than neutral shift. In-gear starting of engine will move the boat immediately, potentially leading to falling down or causing passenger(s) to be thrown overboard.


5 Turn the throttle grip until the mark on the grip faces the triagular mark on the steering handle.

6 Pull out the choke knob all the way. (No choke operation is necessary when the engine is warm.)



MF type

7) Pull the starter handle slowly until you feel resistance. Then pull it quickly.

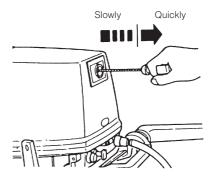

EF type

- (7) Push the starter button.
- 8 Release pushing the button when the engine has started.




O Note

If use the choke knob for the engine start, push back it when the engine has started.

EP type

- 4 Insert the main switch key.
- (5) Set the control lever in the Neutral position.

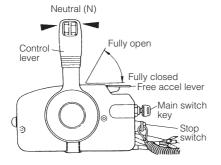


- (6) Raise the free accel lever a little (both of cold engine and warm engine).
- Turn the main switch key to START position. Then, continuously push the key to operate the choke.

Note

Choke operation is not necessary if the engine is warm.

- Stop pushing the key when the engine has started.
 - The key returns to the original position, automatically.
- Returns the Free accel lever to close position.

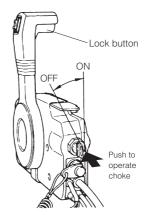

Note

The free accel lever cannot raise when the control lever shift is in Forward or Reverse.

A CAUTION

Do not keep turning starter motor for over 3 seconds, or the battery may be consumed, potentially making the engine starting impossible and/or damaging the starter.


If cranking over 3 seconds fails to start engine, return main switch to "ON", and crank engine again after 5 seconds or more.

If the recoil starter fails to operate

- Remove the top cowl and the recoil starter. Wrap a rope around the starter pulley then pull quickly to start.
- Use a 10 mm socket wrench as a rope handle.



Hook lever

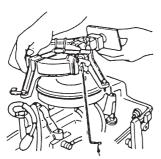

Starter lock rod



WARNING

Be careful that your clothes or other items do not get caught in the rotating engine parts.

To prevent accident and injury, do not re-attach the recoil starter after the engine has been started using the emergency starter rope. Be sure to put the top cowl back on.

Immediately contact an authorized dealer when reaching shore.

WARNING

- Be sure that no bystander(s) is within 2 meters from back of starting operator.
- Do not operate the outboard motor with top cowl removed from the power unit, or contacting turning flywheel which can lead to serious personal injury.

2. Warming up the engine

Warm the engine at low engine speeds for about three minutes. This allows the lubricating oil to circulate to all parts of the engine. Operating the engine without warm up shortens the engine's life.


Be sure to check that cooling water is coming out of the cooling water check port during warm up.

A CAUTION

If the engine is operated without water discharging from the check port or idle port, the engine may over heat.

A CAUTION

Be sure to stop engine immediately if cooling water check port is not discharging water, and check if cooling water intake is blocked. Operating engine could lead to overheating potentially leading to engine damage. Consult an authorized dealer if the cause cannot be found.

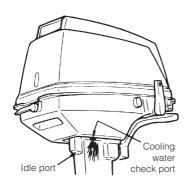

Engine speed

Idling speed after warming up.

Remark: In case of cold engine starting, idling speed is increased about 300 rpm for several minutes.

Clutch in (In gear)	Clutch off (Out of gear)
750 rpm	900 rpm

Propeller selection

Propeller must be selected that will allow the engine to reach recommended rpm when cruising at wide-open throttle.

Model	Wide-open throttle rpm range
6B • 8B	4,500 – 5,500 rpm
9.8B	5,000 – 6,000 rpm

Genuine propellers are listed on PROPELLER TABLE of this manual.

3. Forward and reverse

WARNING

Before shifting into forward or reverse, make sure that boat is properly moored and outboard motor can be steered fully to the right and left. Make sure that no swimmer(s) is ahead or astern of the boat.


⚠ WARNING

- Attach other end of emergency stop switch tether to the operator's clothing or arm and keep it attached during cruising.
- Do not attach the tether to a part of clothing that can be torn easily when pulled.
- Arrange the tether so that will not be caught by any object when pulled.
- Be careful not to pull the tether accidentally during cruising.
 Unintentional stop of engine can cause loss of control of outboard motor. Rapid loss of engine power can lead to falling down or causing passenger(s) to be thrown overboard.

Note

Do not increase engine speed unnecessarily in reverse.

MF and EF type

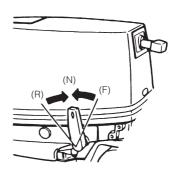

WARNING

Severe damage, and personal injury, may occur if shifting at high engine speed.

Engine must be in the slow idle position before shifting is attempted.

Forward

Turn the throttle grip to reduce engine speed. When the engine reaches trolling (or idling) speed, quickly pull the shift lever to the Forward position.

Reverse

Reduce engine speed, when the engine reaches trolling (or idling) speed, quickly push the shift lever to the Reverse position.

WARNING

Before shifting, make sure that no swimmer(s) or obstacle(s) is ahead or astern of the boat.

A CAUTION

Be sure to warm up engine well before starting cruise. Operating cold engine may cause damage to your motor.


O Note

Idle speed may be higher during warming up of engine. If shifted to Forward or Reverse during warming up, it may be difficult to shift back to neutral. In such case, stop engine, shift to neutral, and restart engine to warm up.

Note

Frequent shifting to forward or reverse can accelerate wear or degradation of parts. In such case, replace gear oil earlier than the period specified.

EP type

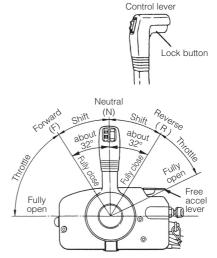

Forward

Quickly push the control lever to the Forward (F) position 32°, where the gear is connected, while lifting up on the lock button located at the bottom of the control lever grip. Further shifting will open the throttle.

Reverse

Quickly pull the control lever to the Reverse (R) position at 32°, where the gear is connected, while lifting up on the lock button located at the bottom of the control lever grip. Further shifting will open the throttle.

) Note


The control lever is inoperative unless the free accel lever is in the fully closed position.

Note

Reduce the engine speed when the control lever is in Neutral and do not increase the engine speed unnecessarily.

4. Stopping

MF and EF type

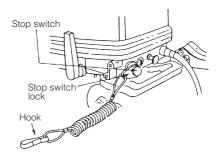



- 1 Turn the throttle grip to the slow position.
- 2 Put the shift lever in the Neutral position.
 - Run the engine for 2-3 minutes at idling speed if it has been running at full speed.
- 3 Push the stop switch to stop the engine or release the stop switch lock.

⚠ WARNING

- · Do not shift into Reverse during planing, or control will be lost leading to serious personal injury, boat may swamp, and/or hull may be damaged.
- Do not shift into Reverse during cruising, or control may be lost, falling down or causing passenger(s) to be thrown overboard. Leading to serious personal injury, and steering system and/or shifting mechanism may be damaged.

EP type



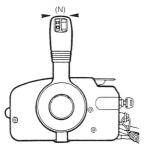

- ① Put the shift lever in the Neutral position and run the engine for 2-3 minutes at idling speed if it has been running at full speed.
- ② Turn the main switch key to the OFF position.

Notes


- After stopping the engine, close the air vent screw on the tank cap.
- Disconnect the fuel connector of the engine or the fuel tank.
- Disconnect the battery cable of the EF or EP type engine, if the engine will not be used for more than 3 days.

5. Trim angle

The trim angle of the outboard motor can be adjusted to suit the transom angle of the hull, and load conditions. Choose an appropriate trim angle that will allow the anti ventilation plate to run parallel to the water surface during operation.

Proper trim angle

The position of the thrust rod is correct if the hull is horizontal during operation.



Improper trim angle


Set the thrust rod lower if the bow of the boat rises above horizontal.



Improper trim angle

Set the thrust rod higher if the bow of the boat is below horizontal.



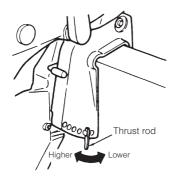

⚠ WARNING

- Do not put hand or finger in between outboard motor body and clamp bracket when adjusting trim angle to prevent injury in case the outboard motor body falls.
- Unsuitable trim position can cause loss of control of boat. When testing a trim position, run boat slow initially to see if it can be controlled safely.

⚠ WARNING

Excessive trim up or down may lead to unstable boat operation, potentially causing the steering difficulty that leads to accident during cruising.

• Do not cruise at high speed if improper trim position is suspected. Stop the boat and readjust trim angle before continuing cruise.

6. Tilt up, tilt down and shallow water operation

⚠ WARNING


When tilting up or down, be careful not to place your hand between the swivel bracket and the stern bracket. Be sure to tilt the outboard motor down slowly.


Note (

Stop the engine before tilting up.

Tilt up

With the shift lever in Neutral or Forward, fully tilt the outboard motor up toward you by holding the tilt handle provided at the rear of the top cowl. Then lower the tilt lever for locking at tilt-up position.

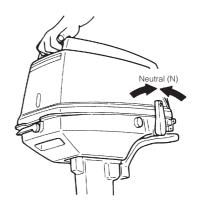

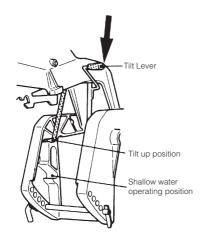

MARNING

- Do not put hand or finger in between outboard motor body and clamp bracket when adjusting trim angle to prevent injury in case the outboard motor body falls.
- When tilting up outboard motor with fuel joint for over a few minutes, be sure to disconnect fuel hose or close fuel cock, or fuel may leak, potentially catching fire.

A CAUTION

Do not tilt up outboard motor during operation, or engine may be damaged from overheating due to lack of sufficient cooling water.

Tilt down

Slightly tilt the outboard motor up, and pull the tilt lever toward you to release the tilt-lock. Then lower the outboard motor slowly.



■ Shallow water operation

WARNING


During shallow water operation, be careful not to place your hand between the swivel bracket and the stern bracket. Be sure to tilt the outboard motor down slowly.

Note

Slow down to trolling speed, and shift into Neutral before setting outboard motor to shallow water drive position.

⚠ WARNING

- Run at lowest possible speed when using shallow water drive.
- Tilt lock is disabled when in shallow water drive position.
- When driving shallow water, be careful not to strike outboard motor against sea bottom, or propeller may be pushed out of water, resulting in loss of control.
- 1 Shallow water running position: With the shift lever in Neutral or Forward, tilt the outboard motor up slowly by about 40° and then lower the tilt lever for setting at the shallow water running position.

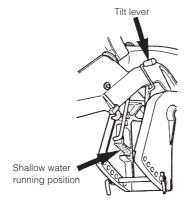

2 Return to normal running position: Tilt the outboard motor up fully and then return the outboard motor down slowly to the normal running position.

⚠ CAUTION

While in shallow water drive position, do not operate the outboard motor in reverse. Operate the outboard motor at slow speed and keep the cooling water intake submerged.

⚠ WARNING

Do not tilt up or down outboard motor when swimmer(s) or passenger is near to prevent them from being caught between outboard motor body and clamp bracket in case the outboard motor body falls.

WARNING

When tilting up outboard motor with fuel joint for over a few minutes, be sure to disconnect fuel hose or close fuel cock, or fuel may leak, potentially catching fire.

♠ CAUTION

Do not tilt up outboard motor while engine operates, or no cooling water may be fed, leading to engine seizure due to overheating.

■ REMOVING AND CARRYING THE OUTBOARD MOTOR

1. Removing the outboard motor

- 1 Stop the engine.
- ② Disconnect the fuel connector, the remote control cables and the battery cords from the outboard motor.
- ③ Remove the outboard motor from boat and completely drain the water from the gear case.

A CAUTION

Engine may be hot immediately after operating and could cause burns if touched. Allow Engine to cool down before attempting to carry the outboard.

2. Carrying the outboard motor

Keep the outboard motor in a vertical position when carrying.



WARNING


Close air vent screw of fuel tank and fuel cock before carrying or storing outboard motor and fuel tank, or fuel may leak, potentially catching fire.

3. Storing the outboard motor

Outboard motor should be stored in a vertical position.


O Note

If the outboard motor must be laid down be sure the tiller handle faces down as shown in the drawing above. Elevate power unit 2 inches to 4 inches if traveling to avoid oil spillage.



A CAUTION

Do not carry or store outboard motor in any of positions described below. Otherwise, engine damage or property damage could result from leaking oil.



■ TRAILERING

WARNING

Do not go under outboard motor tilted up even if it is supported by support bar, or accidental fall of outboard motor could lead to severe personal injury.

WARNING

Close air vent screw of fuel tank and fuel cock before carrying or storing outboard motor and fuel tank, or fuel may leak, potentially catching fire.

WARNING

When taking outboad motor from package or removing outboad motor from the boat, never release the lock lever. If the lock lever is released, it will very easy for the clamp bracket to spring up to the tilting direction because it is not fixed.


- *Care must be taken so as not to release lock lever by accident.
- *For more safety, tie the clamp bracket to the outboard motor with a rope.
- *Pay attention to the tilting direction so as not to be injured by the springing stern bracket.

A CAUTION

The tilt support device supplied on your outboard motor is not intended for towing. It is intended to support the outboard motor while the boat is docked, beached, etc.


A CAUTION

When trailering the outboard motor should be in a vertical (normal running) position, fully down. Trailering in the tilted position may cause damage to the outboard motor, boat, etc. If trailering with outboard motor fully down is not available (the gear case skeg is too close to the road in a vertical position), fix the outboard motor securely using a device (like a transom saver bar) in the tilted position.

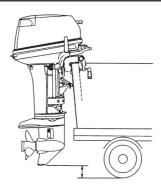

WARNING


Please disconnect fuel connector except when operating engine. Fuel leakage is a fire or explosion hazard, which can cause serious injury or death.

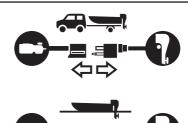

ADJUSTMENT

1. Steering friction

The steering friction can be adjusted in accordance with your preference by turning the steering adjusting bolt.

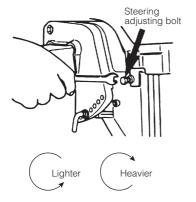

Note


The steering adjust bolt is used to adjust the sliding load of the steering, but not to fix the steering. If excess tightning given to the bolt may lead a cause of damage to the swivel bracket.

WARNING

Do not overtighten the throttle grip or remote control tensioner or it could result in difficulty of movement resulting in the loss of control causing an accident and could lead to severe injury.


2. Remote control lever load

(Throttle friction adjustment screw)
To adjust the load of the remote control lever, turn the throttle friction adjustment screw on the front of the remote control. Turn clockwise to increase the load and counterclockwise to decrease it.

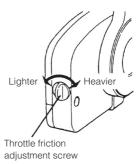

3. Throttle grip


The turning force of the throttle grip can be adjusted with a throttle adjust screw.

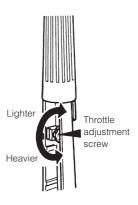

4. Trim tab adjustment

If straight-line cruising can not be achieved, adjust the trim tab located under the anti-ventilation plate.

- If the boat veers toward the right, direct the trim tab towards A.
- If the boat veers toward the left, direct the trim tab towards B.

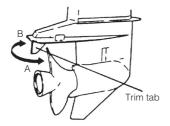

Notes

- The trim tab also acts as an anode to prevent electrolytic corrosion.
 Therefore do not paint or grease this part.
- After adjustment securely tighten the trim tab fixing bolt.
- Check for looseness of the bolt and the trim tab at regular intervals.

Note

Due to corrosion, the trim tab will wear down over time.

The trim tab should be replaced when it has eroded 2/3 of it's regular size.

WARNING

- Inappropriate adjustment of trim tab could cause steering difficulty.
 After installing or readjusting trim tab, check if steering load is even.
- Tighten trim tab bolt to specified torque.

WARNING

- Be sure that outboard motor is secured to transom or service stand, or accidental drop or fall of outboard motor could lead to severe personal injury.
- Be sure to lock outboard motor if it is tilted up, or accidental fall of outboard motor could lead to severe personal injury.
- Do not go under outboard motor tilted up and locked, or accidental fall of outboard motor could lead to severe personal injury.

I INSPECTION AND MAINTENANCE

Care of your outboard motor

To keep your outboard motor in the best operating condition, it is very important that you perform daily and periodic maintenance as suggested in the maintenance schedules that follow.

A CAUTION

- Your personal safety and that of your passengers depends on how well you maintain your outboard motor. Carefully observe all of the inspection and maintenance procedures described in this section.
- The maintenance intervals shown in the checklist apply to an outboard motor in normal use. If you use your outboard motor under severe conditions such as frequent full-throttle operation, frequent operation in brackish water, or for commercial use, maintenance should be performed at shorter intervals. If in doubt, consult your dealer for advice.
- We strongly recommend that you use only genuine replacement parts on your outboard motor. Damage to your outboard motor arising from the use of other than genuine parts is not covered under the warranty.

1. Daily inspection

Perform the following checks before and after use.



Do not use outboard motor if any abnormality is found during pre-operation check or it could result in severe damage to the motor or severe personal injury.

Item	Points to Check	Action
Fuel System	 Check the amount of fuel in the tank. Check for debris or water in the fuel filters. Check the rubber hoses for fuel leakage. 	Replenish Clean Replace
Electrical Equipment	Check that the main switch functions normally. Check that the battery electrolyte level and specific gravity are normal. Check for loose connections on the battery terminal. Check that the stop switch functions normally and make sure the lock plate is there. Check cords for loose connections and damage. Check the spark plugs for dirt, wear and carbon build-up.	Replace Replenish or recharge Retighten Remedy or replace Correct or replace Clean or replace
Choke and Throttle System	Check that the choke solenoid and valve for the carburetor function normally. Check if the carburetor and magneto work normally when turning the throttle grip, and check links for looseness.	Replace Correct
Recoil Starter	Check the rope for wear and chafing.Check the ratchet engagement.	Replace Correct or replace
Clutch and Propeller System	Check that clutch engages correctly when operating the shift lever and remote control. Visually Check propeller for bent or damaged blades. Check the propeller nut is tightened and the split pin is present.	Adjust Replace
Installation of Motor	Check all the bolts attaching the motor to the boat. Check the thrust rod installation.	Tighten
Cooling Water	Check that cooling water is discharged from the cooling water check port after the engine has started.	
Tools and Spares	 Check that there are tools and spare parts for replacing spark plugs, the propeller, etc. Check that you have the spare rope. 	
Steering Devices	Check the operation of the steering handle and remote control.	
Other Parts	Check if the anode and trim tab are securely installed. Check the anode and trim tab for corrosion and deformation.	Repair or Replace

Washing outboard motor

If outboard motor is used in salt water, brackish water or water with a high acidic level, use fresh water to remove salt, chemicals or mud from exterior and cooling water passage after every cruising or before storing outboard motor for long time. Before flushing, remove the propeller and the forward thrust holder.

A CAUTION

Keep cooling water passage free of clogs, or lack of cooling water flow could lead to engine overheating, potentially resulting in engine trouble.

O Note

It is recommended to check chemical properties of water on which your outboard motor is regularly used.


WARNING

Do not start engine without removing propeller, or accidentally turning propeller could cause personal injury.

WARNING

Never start or operate the engine indoors or in any space which is not well ventilated. Exhaust gas contains carbon monoxide, a colorless and odorless gas which can be fatal if inhaled for any length of time.

- Use flushing plug.
- ① Remove propeller (refer to Propeller Replacement). Remove the water plug from the motor, and screw in the flushing plug.
- ② Attach a water hose to the flushing plug. Turn on the water and adjust the flow. (Be sure to seal the water inlet, located in the gear case, with tape.)
- 3 Start the engine and run it at idle speed in neutral shift position.
- ① Check for a steady stream of water flowing out of the water pump indicator hole. Continue flushing the outboard motor for 3 to 5 minutes, carefully monitoring water supply at all times.
- Stop the engine, turn off the water supply, and remove the flushing plug and tape. Reinstall the propeller.

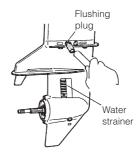

A CAUTION

Keep engine at idle speed during flushing.

Replacing the propeller


A worn-out or bent propeller will lower the motor's performance, and cause engine trouble.

Before removing the propeller, remove the spark plug caps from the spark plugs to protect against personal injury.

WARNING

Do not begin propeller removal and installation procedure with spark plug caps attached, shift in forward or reverse, main switch at other than "OFF", engine stop cord attached to the switch, and starter key attached, or engine could accidentally start leading to serious personal injury. Disconnect battery cable if possible.

- 1 Remove the split pin, propeller nut and washer.
- 2 Remove the propeller and thrust holder.
- ③ Apply genuine grease to the propeller shaft before installing a new propeller.
- 4) Install the thrust holder, propeller, washer and propeller nut onto the shaft.
- (5) Install a new split pin into the nut hole and bend it.

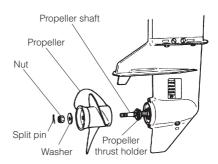

⚠ WARNING

Do not hold propeller with hand(s) when loosening or tightening propeller nut. Put a piece of wood block between propeller blade and anti ventilation plate to hold propeller.

⚠ CAUTION

- Do not install propeller without thrust holder, or propeller boss could be damaged.
- Do not reuse split pin.
- After installing split pin, spread the pin apart to prevent it from falling out which could lead to the propeller coming off during operation.

Replacing the spark plugs

WARNING

- Do not reuse spark plug with damaged insulation, or sparks can leak through crack, potentially leading to electric shock, explosion and/or fire.
- Do not touch spark plugs immediately after stopping engine as they will be hot and could cause severe burns if touched. Allow motor to cool down first.

If the spark plug(s) is fouled, has carbon build up, or is worn, it should be replaced.


When reusing spark plugs, remove dirt from the electrodes and adjust spark gap to specification.

Note

When inspecting the plug, always clean the gasket surface and use a new gasket. Wipe off any dirt from the threads and screw in the spark plug to the correct torque.

- 1) Stop the engine.
- 2 Remove the top cowl.
- 3 Remove the spark plug caps.
- A Remove the spark plugs by turning it counter-clockwise, using a 21 mm (13/16 in) socket wrench and handle.
- (5) Attach spark plug and tighten to specified torque.

Use spark plugs (NGK B7HS-10 or BR7HS-10) or recommended ones.



Note

Spark plug torque:
 25.0 Nm (18.1 ft-lb) (2.5 m-kg)
If a torque-wrench is not available when you are fitting a spark plug, a good estimate of the correct torque


when you are fitting a spark plug, a good estimate of the correct torque is 1/4 to 1/2 a turn past finger-tight. Have the spark plug adjusted to the correct torque as soon as possible with a torque-wrench.

Replacing the anode

A sacrificial anode protects the outboard motor from galvanic corrosion. Anode is located on the gear case, clamp bracket and the cylinder. When the anode is eroded more than 2/3, replace it.

Notes

- Never grease or paint the anode.
- At each inspection re-tighten the anode attaching bolt. As it is likely to be subjected to electrolytic corrosion.

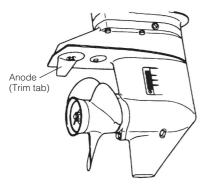

2. Periodic inspection

It is important to inspect and maintain your outboard motor regularly. At each interval on the chart below, be sure to perform the indicated servicing. Maintenance intervals should be determined according to the number of hours or number of months, whichever comes first.

	Item		vicing Inte	rval		
I			10 hours or or 1 month S to hours or 6 months S to hours or 6 months		Action	Remarks
	*Carburetor			•	Strip, clean and adjust. Adjust idling.	
Fuel	Fuel filter	•	•	•	Check and clean.	
System	Piping	•	•	•	Check and Replace.	
	Fuel tank	•		•	Clean.	
Ignition	Spark plugs	•		•	Check gaps. Remove carbon deposits or Replace.	
	*Ignition timing	•		•	Adjust timing.	
	*Starter motor			•	Check for salt deposits and battery cable condition.	
Starting System	Battery	•	•	•	Check Installation, fluid quantity, gravity.	
	Starter rope	•	•	•	Check for wear or damage.	
	Propeller	•	•	•	Check for bend blades, damage, wear.	
Lower Unit	Gear oil	•	•	•	Change or replenish-oil and check for water leaks.	
	*Water pump		•	•	Check for wear or damage.	Replace impeller every 12 months.
Bolt and	Nuts	•	•	•	Retighten.	
Sliding and Rotating Parts. Grease Nipples			•	•	Apply and pump in grease.	
Outer Eq	Outer Equipment		•	•	Check for corrosion.	
Anode			•	•	Check for corrosion and deformation.	Replace.

^{*}Have this handled by your dealer.

Note

Also, your outboard motor should receive careful, and complete, inspection at 300 hours. This is the best time for major maintenance procedures to be carried out.

Cleaning the fuel filters and the fuel tank

Fuel filters are provided inside the fuel tank and engine.


⚠ WARNING

Gasoline and its vapors are very flammable and can be explosive.

- Do not start this procedure while engine is operating or hot even after stopping it.
- Place fuel filter away from every source of ignition such as sparks or open flames.
- Wipe off gasoline well immediately if spilled.
- Install fuel filter with all related parts in place, or fuel leak could occur, leading to catching fire or explosion.
- · Check fuel system regularly for leakage.
- · Contact authorized dealer for fuel system services. Services by unqualified person could lead to engine damage.

Fuel filter (for engine)

Remove the cap, then clean the fuel filter in the engine.

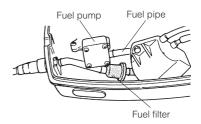


Fuel filter (for fuel tank)

Remove the fuel pickup elbow of the fuel tank by turning it counterclockwise and clean the fuel filter.

Fuel tank

Water or dirt in the fuel tank will cause engine performance problems.


Check and clean the tank at specified times or after the outboard motor has been stored for a long period of time (over three months).

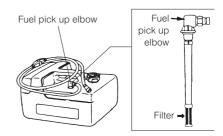

Replacing gear oil

⚠ WARNING


- Be sure that outboard motor is secured to transom or service stand, or accidental drop or fall of outboard motor could lead to severe personal injury.
- · Be sure to lock outboard motor if it is tilted up, or accidental fall of outboard motor could lead to severe personal injury.
- Do not go under outboard motor tilted up and locked, or accidental fall of outboard motor could lead to severe personal injury.
- 1) Remove the oil plugs (upper and lower), and completely drain the gear oil into a pan.

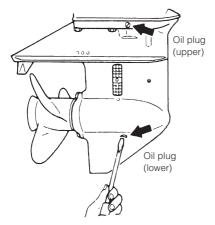


② Insert the oil tube nozzle into the lower oil plug hole, and fill with gear oil by squeezing the oil tube until oil flows out of the upper plug hole.

⚠ CAUTION

Do not reuse oil plug gasket. Always use new gasket and tighten oil plug properly to prevent entry of water into lower unit.

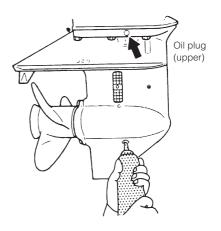

3 Install the upper oil plug, and then remove oil tube nozzle and install the lower oil plug.

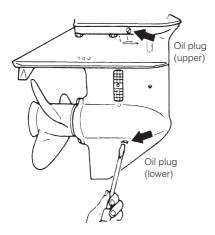

) Note

If water in the oil, giving it a milky colored appearance. Contact your dealer.

) Note

Use genuine gear oil or the recommended one (API GL-5: SAE #80 to #90).

Required volume

: approx. 320 mL (0.08 U.S. gal.)

3. Off-season storage

Before you put your outboard motor in storage, it is a good opportunity to have it serviced and prepared by your dealer.

⚠ CAUTION

Before servicing the motor for storage:

- · Remove the battery cables.
- Remove the spark plug caps from the spark plugs.
- · Do not run the motor out of the water.

Engine

- ① Wash the engine exterior and flush the cooling water system thoroughly with fresh water. Drain the water completely.
 - Wipe off any surface water with an oilv raa.
- 2 Use a dry cloth to completely wipe off water and salt from the electrical components.
- ③ Drain all fuel from the fuel hoses. fuel pump, and carburetor, and clean these parts.
 - Keep in mind that if gasoline is kept in the carburetor for a long time, gum and varnish will develop, causing the float valve to stick, restricting the fuel flow.
- 4 Remove the spark plugs and feed genuine engine oil or storage fogging oil in through the spark plug holes.

The oil will be fed into the crank case from the air silencer attached

9

to the carburetors. Turn the engine over several times while feeding the oil into it and make sure it is evenly distributed.

- (5) Change the gear oil in the gear case.
- 6 Apply grease to the propeller shaft.
- ⑦ Apply grease to all sliding parts, joints, nuts, and bolts.
- Stand the outboard motor up vertically in a dry place.

WARNING

Be sure to use cloth to remove fuel remaining in the cowl and dispose of it in accordance with local fire prevention and environment protection regulations.

Battery

- ① Disconnect the battery cables.
- Wipe off any chemical deposits, dirt, or grease.
- ③ Apply grease to the battery terminals.
- 4 Charge the battery completely before storing it for the winter.
- (5) Recharge the battery once a month to prevent it from discharging and the electrolyte from deteriorating.
- 6 Store the battery in a dry place.

Electric Starter Motor

Coat the internal pinion gears and the shaft of the electric starter motor with grease.

Do not put grease on the teeth of the starter pinion or flywheel or increased wear or damage will occur.

4. Pre-season check

(1) Check that the shift and throttle function properly.

(Be sure to turn the propeller shaft when checking the shift function or else the shift linkage may be damaged.)

) Notes

The following steps must be taken when first using the engine after winter storage.

- ① Warm up the engine for 3 minutes in the "NEUTRAL" position.
- 2 Run the engine for 5 minutes at the slowest speed.
- 3 Run the engine for 10 minutes at half speed.

In Steps 2 and 3 above, the oil used for storage inside the engine will be flushed out to assure optimum performance.

2 Check the electrolyte level, and measure the voltage and specific gravity of the battery.

Specific Gravity at 20 °C	Terminal Voltage (V)	Charge Condition
1.120	10.5	Fully discharged
1.160	11.1	1/4 charged
1.210	11.7	1/2 charged
1.250	12.0	3/4 charged
1.280	13.2	Fully charged

3 Check that the battery is secure and the battery cables are properly installed.

5. Motor submerged in water

After taking your outboard motor out of the water, immediately take it to your dealer.

The following are the emergency measures to be taken for a submerged outboard motor, if you can not take it your dealer right away.

- ① Wash the outboard motor with fresh water to remove salt or dirt.
- ② Remove the spark plugs, and completely drain the water from the engine by pulling the recoil starter several times.
- ③ Inject a sufficient amount of genuine engine oil through the spark plug hole and into the crank case from the carburetor side. Pull the recoil starter several times to circulate the oil throughout the outboard motor.

A CAUTION

Do not attempt to start submerged outboard motor immediately after it is recovered, or engine could be severely damaged.

6. Cold weather precautions

If you moor your boat in cold weather at temperatures below 0°C (32°F), there is the danger of water freezing in the cooling water pump, which may damage the pump, impeller, etc. To avoid this problem, submerge the lower half of the outboard motor into the water, or tilt the motor up above water level and pull the recoil starter several times to drain the water completely.

7. Checking after striking underwater object

Striking the sea bottom or an underwater object may severely damage the outboard motor. Immediately bring the outboard motor to the dealer and ask for the following checks.

1 Looseness or damage of power unit installation bolts, gear case and extension case bolts, propeller shaft housing bolts, propeller or propeller shaft upper and lower mount rubber bolts, and/or mount bracket bolts.

Ask an authorized dealer to tighten any loose bolts and nuts, and to replace damaged parts.

2 Damage to mount rubber, the tilt stopper, thrust rod, gears and clutch, and/or propeller.

Ask an authorized dealer to replace damaged or defective parts.

■ TROUBLESHOOTING

If you encounter a problem, consult the check list below to determine the cause and to take the proper action.

An authorized dealer will always be happy to provide any assistance and information.

	Engine failing to start	Engine starting but stoping soon	Poor idling	Poor acceleration	Engine speed abnormally high	Engine speed abnormally low	High engine speeds not possible	Overheating of engine	Possible cause	
	•	•							Empty fuel tank	
	•	•	•	•		•	•	•	Incorrect connection of fuel sysytem	
	•	•	•	•		•	•	•	Air entering fuel line	
	•	•	•	•		•	•	•	Deformed or damaged fuel pipe	
S	•	•	•	•		•	•	•	Closed air vent on fuel tank	
TEM	•	•	•	•		•	•	•	Clogged fuel filter, fuel pump, or carburetor	
SYS			•	•		•	•	•	Use of improper engine oil	
FUEL SYSTEMS	•		•	•			•	•	Use of improper gasoline	
	•	•	•	•		•	•		Excessive oil in mixture	
								•	Shortage of oil in mixture	
	•			•					Excessive supply of fuel	
	•	•	•	•		•	•	•	Poor carburetor adjustment	
	•	•	•	•			•	•	Recirculation pipe broken	
MS	•	•	•	•		•	•	•	Spark plugs other than specified	
ELECTRIC SYSTEMS	•	•	•	•		•	•		Dirt, soot, etc. on spark plugs	
RIC S	•	•	•	•		•	•		No spark or weak spark	
LECT	•								Short circuit of engine stop switch	
Ш	•		•	•		•	•		Incorrect adjustment of ignition timing	

6	

	Engine failing to start	Engine starting but stoping soon	Poor idling	Poor acceleration	Engine speed abnormally high	Engine speed abnormally low	High engine speeds not possible	Overheating of engine	Possible cause		
	•								Loose battery terminal connection, corrosion		
ELECTRIC SYSTEMS	•								Discharged battery EP and E types		
SYST	•								Main switch trouble		
RIC	•								Lock plate not fitted to stop switch		
LECT	•								Disconnection of wire or loose ground connect	ion	
Ш	•								Insufficient battery capacity, loose terminal connection, corrosion	EP and EF types	
	•		•	•		•	•		Incorrect adjustment of throttle link		
							•	•	Insufficient cooling water flow, clogged or defe	ctive pump	
			•				•	•	Faulty thermostat		
RS				•	•		•	•	Cavitation or ventilation		
OTHERS				•	•	•	•	•	Incorrect propeller selecition		
			•	•	•	•	•	•	Damaged and bent propeller		
				•	•		•	•	Improper thrust rod position		
				•	•	•	•	•	Unbalanced load on boat		
				•	•	•	•	•	Transom too high or too low		

■ TOOL KIT AND SPARE PARTS


The following a list of the tools and spare parts provided with the motor.

	Items	Quantity	Remark
	Tool Bag	1	
	Pliers	1	
	Socket Wrench	1	10 X 13 mm
Service Tools	Socket Wrench	1	21mm
	Socket Wrench Handle	1	
	Screwdrivers	1	Cross- and straight-point
	Screwdriver handle	1	
	Rope	1	1,000 mm
Spare Parts	Spark Plug	1	NGK B7HS-10 or BPR7HS-10
'	Split Pin	1	
	Fuel Tank	1	
Parts Packaged with Engine *	Primer bulb	1 set	
	Remote Control	1 set	EP only
2.19.10	Remote Control Attachment	1 set	EP only

^{*} Not provided with the motor in some markets.

■ OPTIONAL ACCESSORIES



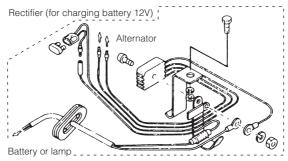

■ PROPELLER TABLE

Use a genuine propeller.

A propeller must be selected so that the engine rpm measured at wide open throttle while cruising is within the recommended range.

Recommended range at WOT: $6B \bullet 8B = 4,500 \text{ to } 5,500 \text{ rpm}$ 9.8B = 5,000 to 6,000 rpm

	Mark		ler Size er x pitch)	Standard propeller on the model			
		inch	mm	6	8	9.8	
Light boats	9.5	8.9 x 10	226 x 255				
	F8.5	8.9 x 8.3	226 x 211	S	S	S	
	7.5	8.5 x 7.5	216 x 190			L & UL	
	7	8.9 x 7.0	226 x 178	L	L & UL		
Heavy boats	6.5	8.5 x 6.5	216 x 165				

S: Short shaft
L: Long shaft
UL: Extra long shaft

MEMO

MEMO



OWNER'S MANUAL MANUAL BOOK SERVICE STATE OF THE SERVICE SERVIC

TOHATSU CORPORATION

Address: 5-4, 3-chome, Azusawa, Itabashi-ku,

TOKYO, 174-0051 JAPAN Phone: TOKYO (03)3966-3117 FAX: TOKYO (03)3966-2951

Website: www.tohatsu.co.jp